Check your LockList .csv file for errors.

This lesson will demonstrate how to correctly import data into Axcys Security Software Version 5.x

locklist.csv - OpenOffice.org Calc <u>File Edit View Insert Format Tools Data Window Help</u> 🗂 - 😕 🔒 👒 📝 🔚 📇 🖎 | 🌿 🕰 🖌 🖺 🛍 • 🚿 | 词 • 🖓 • 🖓 🐇 👪 | 🏙 🅢 🛗 🖉 📮 🗟 🔍 | 🕗 📲 -Arial ▼ 10 💌 B / U = = = = 💷 📕 % 🐉 號 😹 ∉ 🤕 🗆 • 💁 • 🗛 • 🖕 9. → *f_x* ∑ = Α В С D F G н E Unit ID Device Address Priority Bldg No Door No Bldg Level Mux Ch No Mux Slot G001 G G002 G **Missing Building Level** G003 G G004 G Negative Numbers for G005 G G006 G Subterranian Levels G007 G G008 G 0 for Ground Floor G009 G G010 G **Positive Numbers for** 12 G011 G **Additional Floors** 13 G012 G 14 G013 G G014 G G015 G 17 G016 G 18 G017 G G 19 G018 G019 G 21 G020 G 22 G021 G

Launch Axcys_Converter5x.exe



Set fields properly as shown. Click Begin Conversion

Check Resulting Import		

Relay Zone Cor	ntrol Set Up Building	Zone Set Up	Gate and Dr Monitoring	Keypad Zones	s Mux and Keypad Defaults
Communicat	ion Key	pads	Receivers	MSTC Alarm Muxe	s Relays
Proxitrol Mux	es Elevati	ors			
emote Number	Mux N	ame			Change Priority
}elay1 Name }elay2 Name		 Fire On Alarm Fire On Alarm 			Priority
Remote No Pri	ority Remote	Alarm	Slot		
100 3	From Axcys	From Axcys	3		
100 3	From Axcys	From Axcys	4		
100 3	From Axcys	From Axcys	5		
					-

Checking Units have been imported.

Preferen	ces Buildings	Access Hours	Messages		Sounds	8	Internet
Juilding Nun	nber	Doo	r Number		Floor	•	
luilding Nan	ne	Doc	r Name				
Bldg No	Building Name		Door No	Door Name	Alarmed?	Floor 🔺	
G	From Axcys Importer		001	From Axcys I	Y	0	
G	From Axcys Importer		002	From Axcys I	Y	0	
G	From Axcys Importer		003	From Axcys I	Y	0	
G	From Axcys Importer		004	From Axcys I	Y	0	
G	From Axcys Importer		005	From Axcys I	Y	0	
G	From Axcys Importer		006	From Axcys I	Y	0	
G	From Axcys Importer		007	From Axcys I	Y	0	
G	From Axcys Importer		008	From Axcys I	Y	0	
G	From Axcys Importer		009	From Axcys I	Y	0	
G	From Axcys Importer		010	From Axcys I	Y	0	
G	From Axcys Importer		011	From Axcys I	Y	0	
G	From Axcys Importer		012	From Axcys I	Y	0	
G ▲	From Avous Importer		013	From Avous I	Y	}	

Check Muxes Exist.

Relay Zone (Control Set Up	Building 2	Cone Set Up	Gate and Dr Monitoring	Keypad Zones	Mux	and Keypad Defaults
Communi	cation	Кеур	ads	Receivers	MSTC Alarm Muxes		Relays
Proxitrol M	uxes	Elevato	rs		1		
lemote Number		Mux Na	ime				Change Priority
Relay 1 Name			Fire On Alarm			F	Priority
lelay 2 Name			Fire On Alarm				
Remote No F	Priority	Remote	Alarm	Slot			
100 3	}	From Axcys	From Axcys	3			
100 3	}	From Axcys	From Axcys	4			
100 3	}	From Axcys	From Axcys	5			

Add Relays for Muxes

Pro	oxitrol Muxes	Elevators		1979	50 Y
Relay Zone	e Control Set Up	Building Zone Set Up	Gate and Dr Monitoring	Keypad Zones	Mux and Keypad Defaults
Commu	nication	Keypads	Receivers	MSTC Alarm Muxes	Relays
emote Numb	er 100 Sl	ot Number 3 🚽 F	emote Name From Axcys Imp	porter	GBL 485 🗸
Show Relay	ys				
		Fieldy Se	a Up information		Manuallu .
Relay On 1	fime (Secs) - '0' will lea Nome	ave on until tenant leaves	Se Delau Zana Dé	ecs Fire On Alarm	Switch Relay Status
Relay 1 5	Relay 1	Shunt Alarm			Turn On
Relay 2 5	Relay 2	Siren			Turn On
Nolay O	From Axcys Conve	atter			Turn On
Relay 4	From Axcys Conve	rter		-	Turn On
Relay 5	From Axcys Conve	rter		-	Turn On
Relay 6	From Axcys Conve	rter		- I I	Turn On
Relay 7	From Axcys Conve	rter		- I I	Turn On
	From Axcys Conve	rter			Turn On
Relay 8					

View Relays Assignments

Relay	Zone Control Set Up	Building 2	Zone Set Up	Gate and Dr Monitoring	Keypad Zones	Mux and Keypad Default
Co	mmunication	Кеур	ads	Receivers	MSTC Alarm Muxes	Relays
Proxit	trol Muxes	Elevato	rs			1
emote Nu	mber 100	Mux Na	ame From Axc	ys Importer		Change Priority
elav 1 Nar	me Shupt Alarm	N	Fire On Alarm			Priority 3
elay 2 Nar	me Siren	I	Fire On Alarm			
Romoto	NotPriority	Bemote	Alarm	Slot		
100	3	From Axcvs	From Axcvs	3		
100 100	3	From Axcys From Axcvs	From Axcys From Axcvs	3		
100 100 100	3 3 3	From Axcys From Axcys From Axcys	From Axcys From Axcys From Axcys	3 4 5		
100 100 100	3 3 3 3	From Axcys From Axcys From Axcys	From Axcys From Axcys From Axcys	3 4 5		
100 100 100	3 3 3 3	From Axcys From Axcys From Axcys	From Axcys From Axcys From Axcys	3 4 5		
100 100 100	3 3 3 3	From Axcys From Axcys From Axcys	From Axcys From Axcys From Axcys	3 4 5		
100 100 100	3 3 3 3	From Axcys From Axcys From Axcys	From Axcys From Axcys From Axcys	3 4 5		
100 100 100	3 3 3	From Axcys From Axcys From Axcys	From Axcys From Axcys From Axcys	3 4 5		

Note the setting selected to "Fire On Alarm"

Check on Bench

Even if the system is deployed, testing the set up locally can be done with a simple test setup using a mux (of any size), a keypad and a jumper wire.

Insert a Single Tenant using Tenant Wizard

The single tenant will be used to check how the set up reacts when after this tenant logs in with the keypad, and a simulation of a door open/close is performed using the jumper wire.

Use Keypad to place Tenant On-Site

With the keypad set to address 1, which is typically the Entry Keypad, enter the Tenants' PIN. This will place them On-Site.

Use Jumper Wire to Test Mux

Using the jumper wire, from ANY ground pin, to the appropriate channel - which has been assigned to the Tenants Door. Note the reaction of the software. NOTE** Be sure the screen is set to Show "Gate And Door Activity" in View->Remote Status Display Options-> Gate And Door Activity. You should see that the door has changed state from Open to Closed, or Closed to Open depending on your jumper wire. There should be no alarm but a Mux Event.

Click Remove On Site

Click the remove on site button. This enables the alarms.

Repeat Mux Test

Repeat the mux test, this time with the Tenant NOT On-Site. The Relays on the Mux should fire (so long as they have been set to "fire on alarm". The screen should say ALARM, and not MUX Event.